QuickStartGuide

ARIR600i

www.arinfiniteradio.com

Congratulations on purchasing your new Acoustic Research Wi-Fi Internet Radio.
Please follow these instructions to set up and start using the radio.

1 Unpack the unit

To Exit DEMO mode press and release preset **1**, then **SLEEP**, then preset **6**.

You should find the following items in the box:



Radio

Remote control*

AM loop antenna

Ethernet cable

User Manual

Quick Start Guide (this leaflet)

Setup Information Card

Additional requirements:
- Broadband Internet service
- Broadband (cable/DSL) modem, usually supplied by your Internet service provider
- An 802.11 b or g (Wi-Fi) wireless home network or Ethernet router/switch/hub with available LAN port

For Wi-Fi connections, you may also need:
- Your wireless network's SSID
- Your access password (for secure networks)

2 Setup your **AR Infinite Radio accounts**

To simplify setup on the radio please complete these steps:

A. Find the Setup Information Card that contains your radio's MAC address number (MAC: 00-21-2A-XX-XX-XX) and activation PIN # (PIN: 0000). (This number is also found in the Device Info screen under the Settings menu in your radio or on the sticker located on the back of the radio.)

B. Using any Internet-connected computer, go to **www.arinfiniteradio.com/setup** and follow the online instructions.
- You will need to input your radio's MAC address and PIN # to associate your radio with your personal settings.

v1.0 (EN)

*The remote control must be inserted with 2 "AAA" batteries (not included) prior to use.

3 *Optional: For use with a "Wired" connection*

Use the supplied Ethernet cable if you do not have a wireless (Wi-Fi) access point.

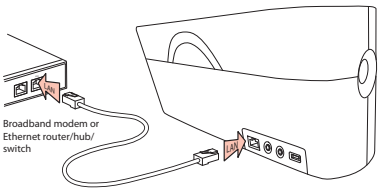

Broadband modem or Ethernet router/hub/ switch

4 Plug in and turn on the radio

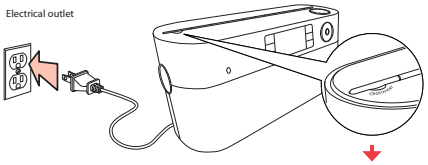

Electrical outlet

Exit the DEMO mode after turning on

Press and release preset **1**, then **SLEEP**, then preset **6**.

5 Set up the radio

A. **NOTE:** When you turn on the radio for the first time, it will be in **"DEMO"** mode. To exit this mode, press and release preset **1**, then **SLEEP**, then preset **6** on top of the radio.

B. After exiting the DEMO mode, the radio displays the **Select Language** screen. Choose your preferred language.



C. The **Network Setup** screen displays connection options:
- Select **Wired** to connect using an Ethernet cable and proceed to step D.

OR
- Select **Wireless**, then choose from setup options displayed:
  - **Detect Networks** allows you to search for available networks, then choose your network.
  - **Enter SSID** allows you to manually enter a known network name (SSID). See tips to the right.
  - If the network is secure, select security type and/or enter your password in the **Network Security** screen.

NETWORK SECURITY
Enter password/key
USE ▲/▼ for more
Press ▼ to show "DONE" and SELECT to confirm.
Press ⏮ or ⏭ to highlight, SELECT to confirm.
6e7821a52
DONE
USE ▲/▼ for more

D. The radio should now connect to the Internet. If the radio does not connect refer to the troubleshooting section in your user manual.

After connecting to the Internet



- If you did not activate your Infinite Radio accounts, or if the radio cannot get your details from the Infinite Radio server, the radio may ask for your ZIP code. Input your code.
- If your radio has successfully connected to the Internet you will hear a welcome message.

Use the navigation controls to make choices and input information:



Radio Remote control

▲ – move highlight up
▼ – move highlight down
⏮/◀ – move selection/navigate left
⏭/▶ – move selection/navigate right
SELECT - confirm selected option or character

When inputting characters, press ▲ or ▼ to choose among uppercase, lowercase, numeric, or special characters.
To insert spaces or correct mistakes, press ▼ to display the Commands list and then press ⏮ or ⏭ (or ◀/▶) to choose the desired command.

About passphrase:
- This radio supports secured access points using the Wireless Equivalent Privacy (WEP) keys or Wi-Fi Protected Access (WPA and WPA2) standards.
- WEP keys are either 10 or 26 characters long (e.g. 6E78214A52). Note that some Wi-Fi routers support passphrase generation for WEP security. However, there is no industry standard for WEP passphrase generation and *this radio does not support WEP passphrases.*
- If you are using a WEP secured access point, enter the WEP key (HEX format) instead of the passphrase.

Learn more about your Internet Radio

Read the user manual for more information on the player's features, safety and warranty information, and answers to Frequently Asked Questions (FAQ's).

Need more help? Do not return this product to the store.

Visit **www.arinfiniteradio.com** to get the latest firmware updates and FAQ's.

Downloaded from www.Manualslib.com manuals search engine

Controls

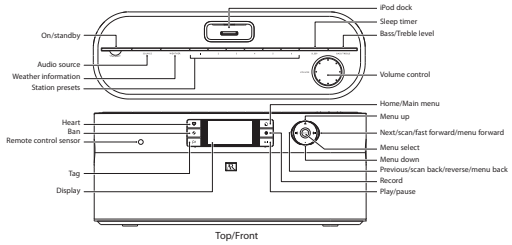

Top/Front

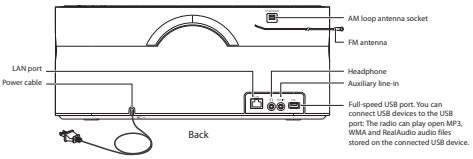
AM loop antenna socket
FM antenna
LAN port
Power cable
Headphone
Auxiliary line-in
Full-speed USB port. You can connect USB devices to the USB port: The radio can play open MP3, WMA and RealAudio audio files stored on the connected USB device.

Back

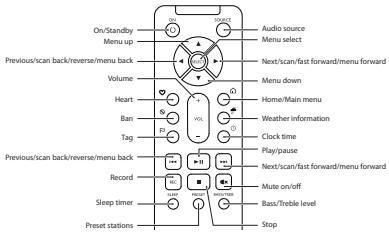

Remote control

RealAudio is a trademark or a registered trademark of RealNetworks, Inc.

Using the radio

General procedures

Turn on/off (standby) the radio	Press **ON/STANDBY**.
Choose an audio source	Press **SOURCE** to cycle through the audio sources (Slacker Radio, Internet Radio, MP3tunes, FM/AM Tuner, iPod, Internal Memory, USB Input or Aux-in).
Choose a preset radio station (Slacker, Internet, FM, or AM mode)	On the remote control, press **PRESET** and then ▲ or ▼ to choose a preset station from the list and then press **SELECT** or ⏯.
Assign the current radio station to a preset	Press and hold a preset button (**1**–**6**).
Display the menu while listening	Press ⌂.
Record the current AM/FM/Internet radio station	Press ⏺. Press ⏺ again to stop recording.
Display the time	Press 🕒.
Set the time	Press and hold 🕒 until the hour is highlighted. Press ⏮ or ⏭ (or ◀ / ▶) to choose hours, minutes or AM/PM (for 12-hour display mode). Press ▲ or ▼ to change the time. Press **SELECT** to set the time.

Listening to Slacker™ radio

Choose a Slacker™ station	Press **SOURCE** to choose Slacker Radio. Press ▲ or ▼ to move up and down the menu options and press **SELECT** to choose the desired genre and station.



Start playing the selected station	Press **SELECT**.
Pause playback	Press ⏯. Press again to resume.
Skip to the next song	Press ⏭ or ▶.
Mark the current song as a favorite	Press ♡.
Create a custom station based on the current artist	Press and hold ♡ or press ⚐ and choose Create Station and then press **SELECT**.
Ban the current song from the station	Press ⊘.
Ban the current artist from the station	Press and hold ⊘.

Listening to Internet radio

Choose an Internet radio station	Press **SOURCE** to choose Internet Radio. Press ▲ or ▼ to move up and down the menu options and press **SELECT** to navigate to the desired station.

Start playing the selected station	Press **SELECT**.
Mark the current station as a favorite	Press ♡ or press ⚐ to display the options menu. Press ▼ to choose **Add to Favorites** and then press **SELECT**.
Remove the current station from My Favorites	Press ⊘.

Listening to MP3tunes

Set up MP3tunes Locker	Refer to MP3tunes section of the user manual.
Play an audio file from MP3tunes Locker	Press **SOURCE** to choose MP3tunes. Press ⏮ or ⏭ (or ◀ / ▶) to exit or enter categories. Press ▲ or ▼ to highlight a file and press **SELECT** or ⏯ to start playback.
Pause playback	Press ⏯. Press again to resume.
Skip to the next audio file	Press ⏭ or ▶.
Skip to the previous audio file	Press ⏮ or ◀ within the first 3 seconds of the current file.

Listening to FM/AM radio

Tune in an FM/AM radio station	Press **SOURCE** to choose FM or AM radio. Press and hold ⏮ or ⏭ (or ◀ / ▶) until the radio beeps to auto-tune to the previous or next available station.
Step through the radio frequencies	Press ⏮ or ⏭ (or ◀ / ▶).

Playing recordings, iPod and audio files

Play a recording	Press **SOURCE** to choose Internal Memory. Press ▲ or ▼ to highlight a recording and press **SELECT**.
Connect iPod with the radio	Refer to iPod section of the user manual.
Play an audio file from a connected USB device or iPod	Press **SOURCE** to choose USB or iPod. Press ⏮ or ⏭ (or ◀ / ▶) to exit or enter folders. Press ▲ or ▼ to highlight a file and press **SELECT** or ⏯ to start playback.
Pause playback	Press ⏯. Press again to resume.
Skip to the next recording/audio file	Press ⏭ or ▶.
Skip to the previous recording/audio file	Press ⏮ or ◀ within the first 3 seconds of the current recording/file.

Listening to Weather Forecasts

Listen to today's local forecast	Press **WEATHER** once.
Listen to 3-day local forecast	Press **WEATHER** twice.

For information on new and upcoming products and to register your new radio, visit **www.arinfiniteradio.com**.

Audiovox Electronics Corp.
150 Marcus Blvd., Hauppauge, NY 11788
© 2009 Audiovox Electronics Corp.
Trademark Registered
www.audiovox.com

Downloaded from www.Manualslib.com manuals search engine